

Barcode Scanner

Programming Codes for Classic & Early Vector Barcode Scanner (Model No. IDT4813LR)

Scan the following barcodes in the order they are on the page.

If correct, you should hear:

1



2 Beeps

Enter Setup Mode

2



2 Beeps

Reset to Default

3



2 Beeps

Terminator Character

4



2 Beeps

None

5



4 Beeps

Exit Setup Mode

Programming Codes for Newer Vector (and Classic) Barcode Scanners
(IDT4493LR Model No. MT7800)

Scan the following barcodes in the order they are on the page.

DEFAULT

If correct, you should hear:

1



2 Beeps

TERMINATOR

2



2 Beeps