

**Subject: Grundig Overhead Monitor Adjustment**

Date: 9/4/01

**Distribution: All Classic Scorer Customers**

Letter No. CEB01-6

A number of customers have recently inquired about a procedure to adjust the image size and position for the Grundig monitors used in the Classis Scoring system. The following procedure describes the steps necessary to properly adjust these monitors.

*Caution: Improper adjustment of the monitors can result in a damaged or unreadable monitor. Do not change any setup parameter other than those detailed in this adjustment procedure.*

### **Grundig Monitor Adjustment Procedure**

The screen adjustments for the Grundig monitors are performed through on screen menus using the monitor's remote control.

Adjust the image's position on the monitor as follows.

1. Turn the monitor to be adjusted "On".
2. Using the remote control, access the Dialog Center screen by pressing the key [I] then [OK].
3. Use the **P-** and **P+** keys until the menu option "**Service**" is highlighted. Press [OK] to select service.
4. Use the **P-** and **P+** keys until the menu option "**For authorized dealer**" is highlighted.
5. Enter the password **8500** to enter the dealer menu.
6. Use the **P-** and **P+** keys until the menu option "**Geometry**" is highlighted. Press [OK] to select geometry.

*Caution: Select the option, "Geometry." Selecting any other option may cause damage to the monitor.*


7. Use the **P-** and **P+** keys until the the height, width, line shift (horizontal centering), or verical shift (vertical centering) option is highlighted. Press [OK] to enter the change screen for the selected adjustment.
8. Use the **<-** and **>+** keys to alter the settings for the adjustment. Press [OK] when finished.
9. Repeat steps 7 and 8 to perform other adjustments as needed.
10. When finished with all adjustments, use the **P-** and **P+** keys until the menu option "End" is highlighted. Use the **<-** and **>+** keys to select the desired exit option. ("With Memory" saves your changes on exit. "Without mem." exits without saving changes.) Press [OK] to exit.

Regards,



Bill Jager

Service Product Engineer



David E. Rice

Director of Training and Support