

SERVICE BULLETIN

**Subject: Cleaning and Maintaining the Appearance of Sync
Scorer Tablets**

Date: 3/13/20

Bulletin No. SB20-1

We realize that proper sanitation and appearance of the touchscreen tablets used in the Sync Scoring system is important to you and your bowlers. To help you properly maintain the tablet and protect it from damage not covered by warranty, we offer these cleaning and sanitizing tips:

- Never use a paper towel or other paper-based towels as they can leave scratches on the screen. The scratches will be small but can build up over time, damaging and dulling the screen. Instead, use micro fiber cloths, which are specially designed to clean sensitive surfaces.
- Avoid spraying any liquid directly on the touch screen.
- For general cleaning of fingerprint smudges, dust, and lint, wipe the screen gently using a dry micro fiber cloth. For dirtier screens, use a small amount of water (don't add soap or anything else to the water) applied to the cloth to make it slightly damp.
- DO NOT use harsh chemicals, including Windex, or any other ammonia based cleaners.
- For sanitation and other cleaning needs, use 75% alcohol wipes or an equivalent liquid cleaner.

If you have questions regarding the information contained in this Service Bulletin, please contact Brunswick Technical Support at 1-800-937-2695 or 1-231-725-4966, FAX 231-725-4667, or e-mail techsupport@brunswickbowling.com.

Visit <https://brunswickbowling.com/bowling-centers/service-and-support/document-library> for electronic files of this and other service bulletins.



Chuck Kelso
Director of Capital Services



William P. Jager
Knowledge Transfer Manager