

Ottoman Glide Replacement

Tools Needed

- 5/16" (8 mm) drill bit
- Drill motor
- Tape measure
- Rubber Hammer

Package 54-861091-000

QTY	Part No.	Description
40	54-200068-000	Glide
1	54-900159-000	Instruction Sheet

Instructions

1. Remove the old glides (5-places). Refer to *Figure 1*.

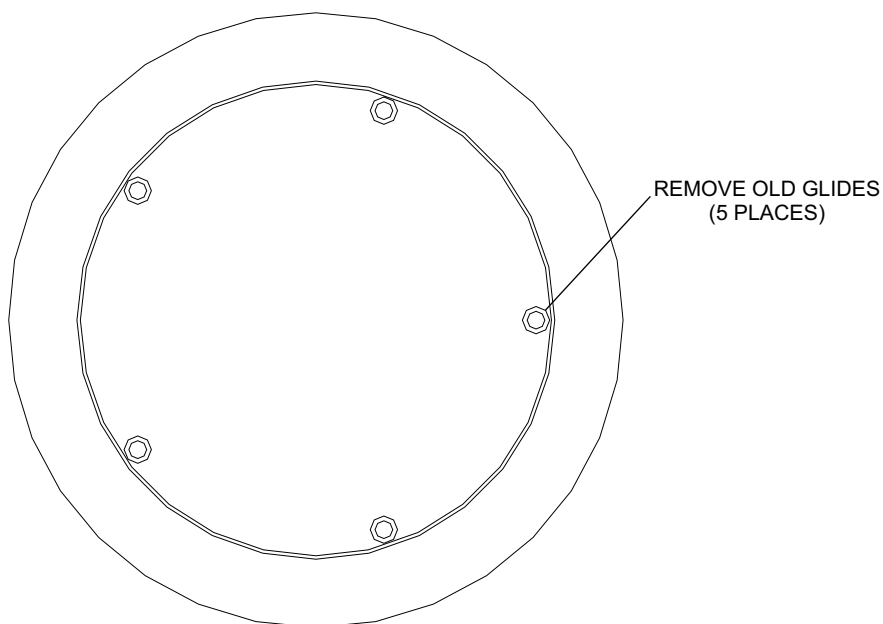


Figure 1

2. Mark guide lines where the old glides were located (see *Figure 2*), measure 3/4" (19 mm) from the edge of the ottoman. Refer to *Figure 2*.

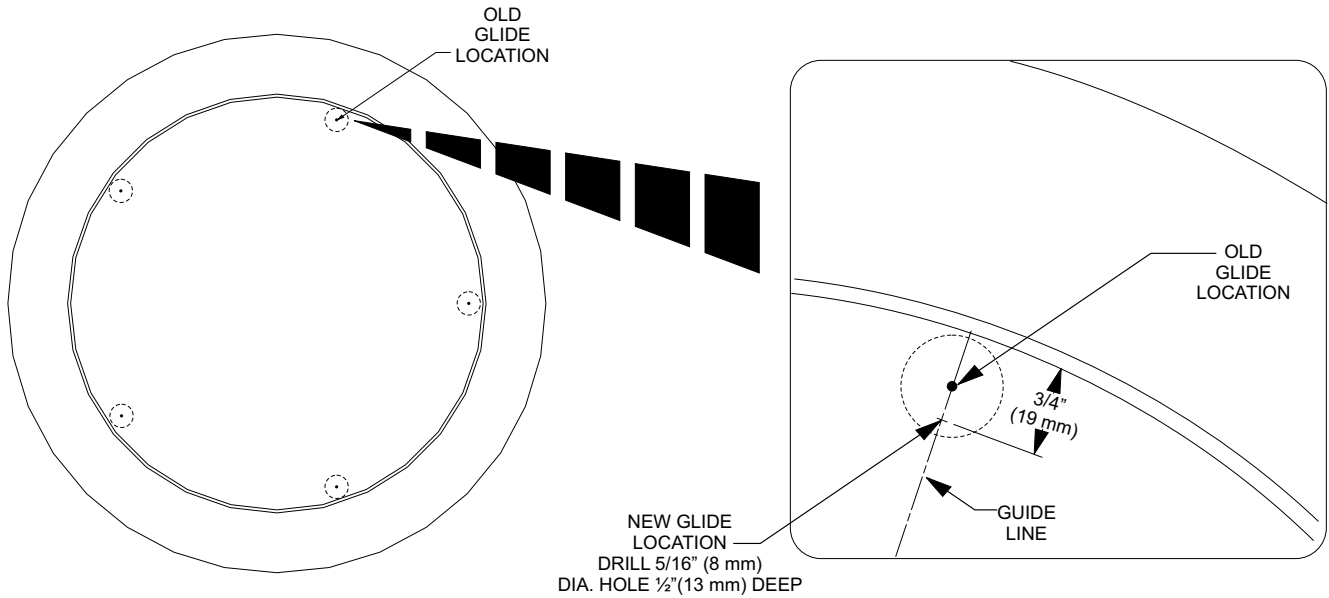


Figure 2

3. Use a 5/16" (8 mm) Dia. bit to drill a 1/2" (13 mm) deep hole at each of the five location. Refer to *Figure 2*.

i **NOTE:** DO NOT drill deeper than 1/2" (13 mm).

4. Install the new glide (P/N 54-200068-000) with a rubber hammer.
5. Repeat *step 4* for the remaining glides. Refer to *Figure 3*.

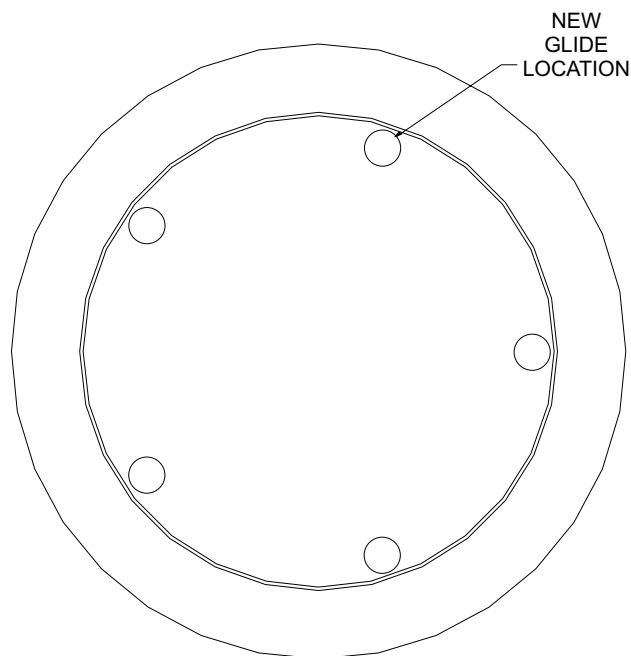


Figure 3