


T-Handle Keypad Cable Connection

This replacement T-handle is shipped with a new black plastic connector that can be installed without special tools AFTER the electrical cable is routed through the pivot bracket. The white block (electrical noise suppression) should be slid onto the end of the electrical cable and positioned ~1-1/2" (38 mm) from the loose terminals BEFORE inserting them into the new black connector.

The wire color location of the wires in the old connector (with the damaged handle) should be used as a guide for installing the new wires into the new black connector. Also refer to the following figures. The terminal tabs should lock into the new connector when properly installed.

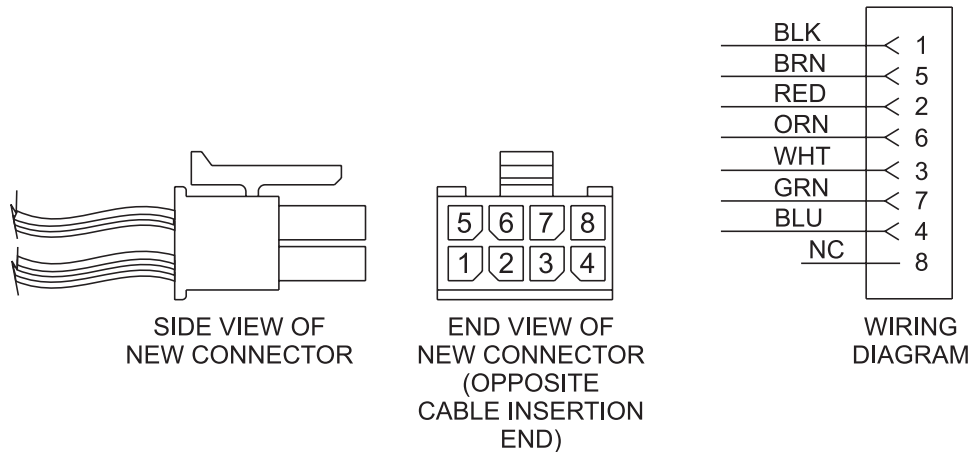

NEW 8-PIN CABLE CONNECTOR (GUI END)