


## Cushion Adjustment Hardware Kit

### Packaging

4	Ea.	11-191014-001	3/8 Flat Washer
6	Ea.	11-191018-001	1/2 Flat Washer
6	Ea.	11-176002-001	3/8-16 Hex Nut w/Lockwasher
2	Ea.	11-071063-001	3/8-16 x 4" Carriage Bolt


### Installation

1. Remove and discard existing metric hardware. Refer to *Figure 1*.

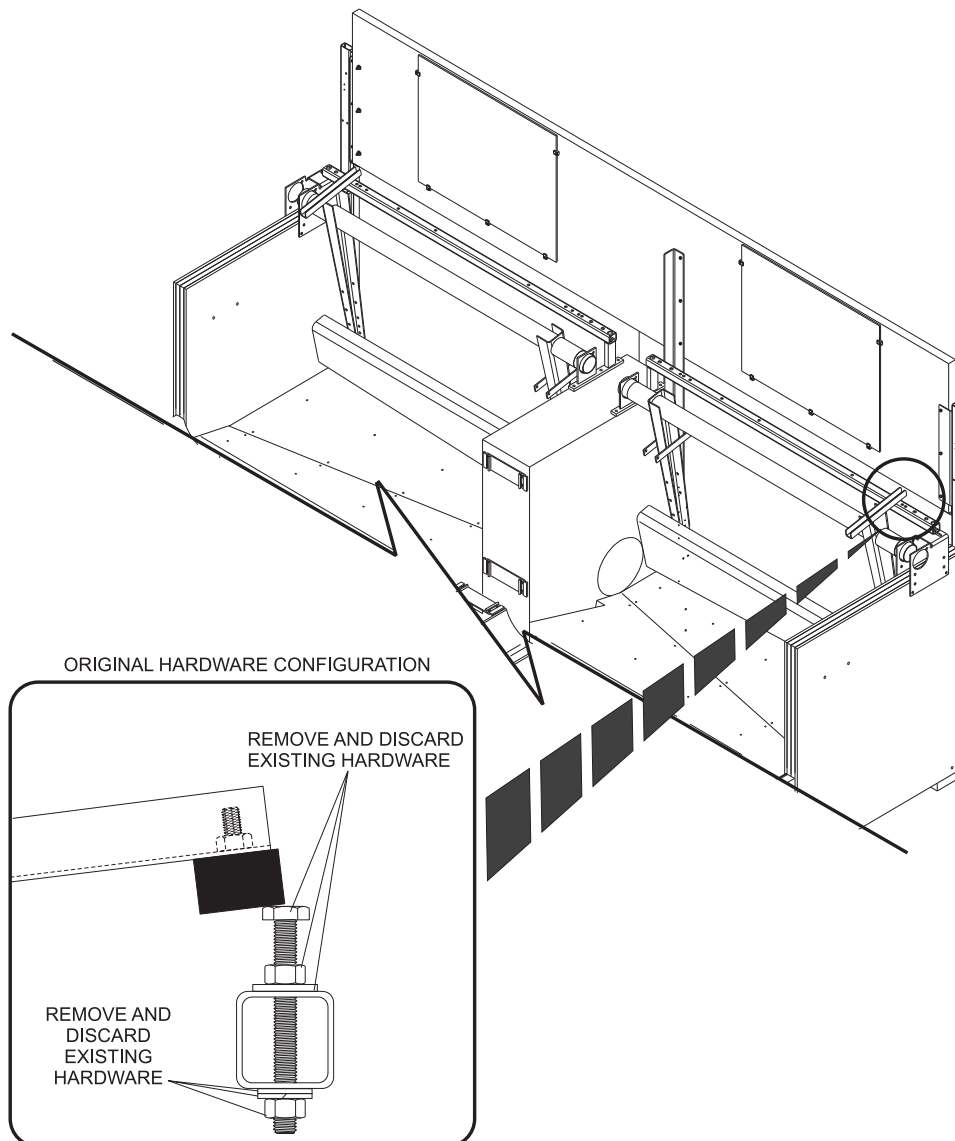


*Figure 1*

- Assemble adjusting bolt to be installed in pit cushion frame. Refer to *Figure 2*.

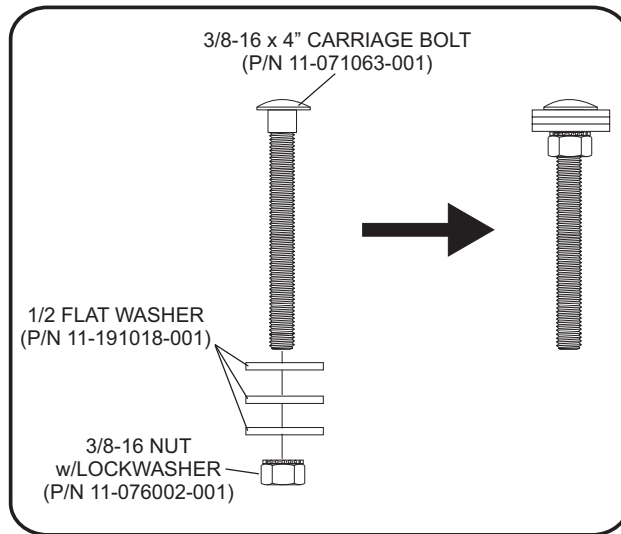

*Figure 2*

- Secure adjustment bolt assembly to pit cushion frame using new hardware. Refer to *Figure 3*.

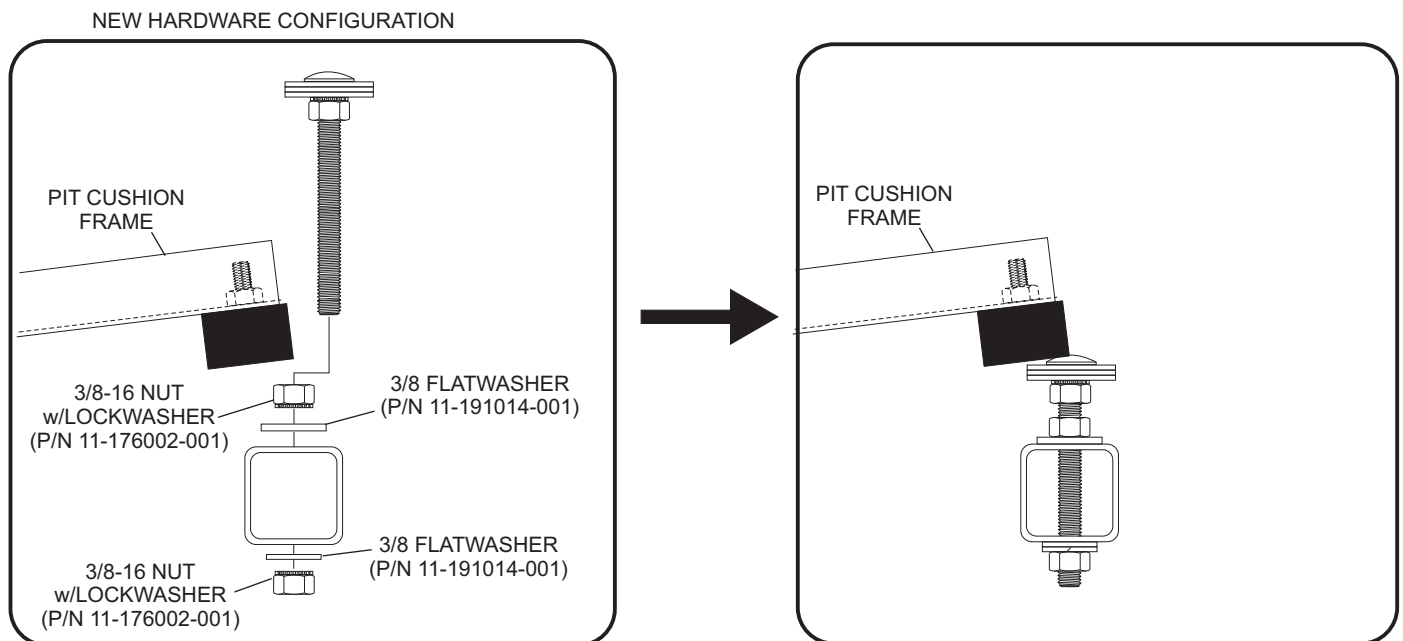

*Figure 3*